



INSTALLATION INSTRUCTIONS

DC100, DC150, DC200 Series

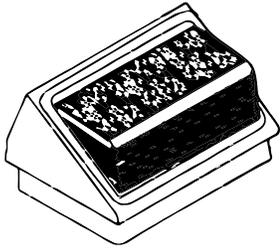

DC150 Series

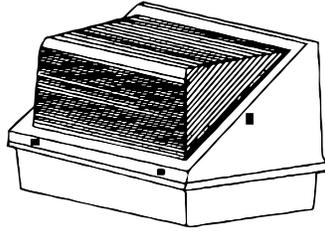

DC200 Series

*FIXTURE MAY VARY SLIGHTLY

CAUTIONS

IMPORTANT SAFEGUARDS

When using electrical equipment, basic safety precautions should always be followed including the following:

READ AND FOLLOW ALL SAFETY INSTRUCTIONS

1. **DANGER-** Risk of shock- Disconnect power before installation.
2. This luminaire must be installed in accordance with the NEC or your local electrical code. If you are not familiar with these codes and requirements, consult a qualified electrician.

SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE

MOUNTING

NOTE: Do not recess. Also make sure fixture is weatherproof by sealing all gaps and holes with weatherproof silicone sealant.

USING 1/2" PLUGS OR KNOCKOUTS IN THE BACK

1. Remove lens assembly by loosening screws on side of frame. Swing lens assembly open, disconnect connector(s) and lift upward to remove from housing.
2. Drill appropriate knockouts from back of fixture for wiring access.
3. Fixture is best mounted by drilling through back of fixture securing it to the mounting surface using the appropriate mounting hardware for the surface. Mounting hardware supplied by others. When drilling holes, do not drill within 1/4" (6.4 mm) from edges of fixture, also use caution when drilling near the power supply not to nick, or leave metal chips behind. All unused holes must be plugged. Waterproof silicone will ensure a tight seal.

4. Complete the wiring to the power source and ground (refer to wiring instructions).
5. Replace lens assembly, connect connector, and swing lens assembly into place. Tighten screws that were loosened in Step 1.

USING 1/2" PLUGS ON THE SIDE

1. Remove lens assembly by loosening screws on side of frame. Swing refractor open, disconnect connector(s) and lift upward to remove from housing.
2. Remove 1/2" plug from direction you intend to feed conduit.
3. Fixture is best mounted by drilling through back of fixture securing it to the mounting surface using the appropriate mounting hardware for the surface. Mounting hardware supplied by others. When drilling holes, do not drill within 1/4" (6.4 mm) from edges of fixture, also use caution when drilling near the power supply not to nick, or leave metal chips behind. All unused holes must be plugged. Waterproof silicone will ensure a tight seal.
4. Feed conduit to the desired hole and complete the wiring to the power source and ground (refer to wiring instructions).
5. Replace lens assembly, connect connector, and swing lens assembly into place. Tighten screws that were loosened in Step 1.

FIXTURE WIRING

1. Connect the black fixture lead to the voltage supply lead with customer supplied wire connector.
2. Connect the white fixture lead to the neutral supply lead with customer supplied wire connector.
3. Connect the green, or green/yellow, or bare copper ground lead to the supply ground lead with the customer supplied wire connector.