
- **WARNINGS** | This product must be installed in accordance with all applicable codes by a person familiar with the product.
 - · Each fixture must be **properly supported** during install.
 - **DO NOT** join fixtures on the floor prior to lifting, or damage will occur.
 - · Before beginning installation, review our complete list of warnings by visiting www.mobern.com/warnings.

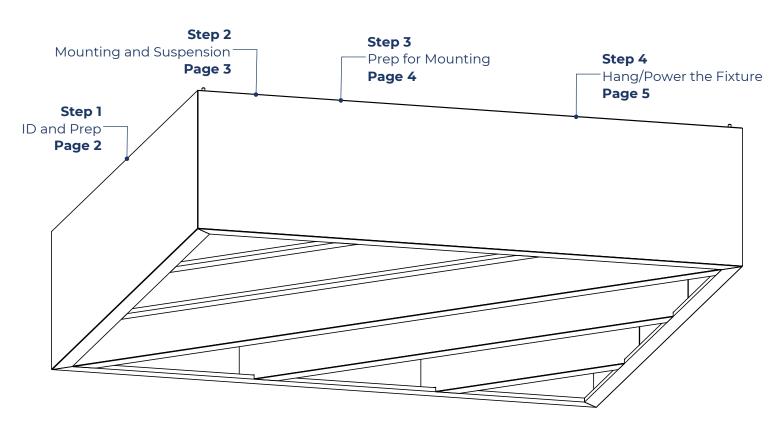


AWB Installation Instructions **Step 1 -** Identification and Preparation

MOBERN

A. Identify Fixtures



B. Tools Needed

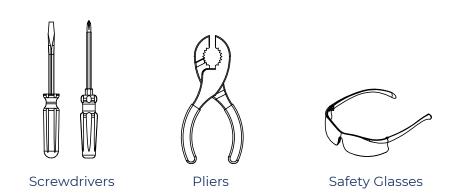

- Use labels found on the box and inside the fixture bodies to identify bodies.
- · NOTE: Locations of labels can vary.
- · Remove all fixtures from their boxes.
- · Organize fixtures based on their labels at the install location.
- · Always use proper safety equipment when installing fixtures.
- Tools shown are recommended for standard install. Tools needed may vary based on actual install location conditions.

Kitted Hardware

- Mobern has provided the items listed here, with their Saylite part numbers listed. These items can be found in separate boxes shipped with the fixture.
- Ensure all parts are accounted for and set them aside until needed.
- Any additional hardware needed for this installation will be provided by others.

AWB Installation Instructions **Step 2 -** Mounting and Suspension



Mounting

Drywall or other hard surfaces - HC 801 Hanging Kit*


- · Install hanging kits at suspension locations.
- Ensure hanging kits are secure.
- · Prepare fixture for mounting.

Other hard surfaces include: wood, sheet metal panels, steel beams, concrete or masonry. Use hardware appropriate for each surface and material type.

Suspension Locations

X = Suspension Dimensions

Refer to Assembly Drawings and building plans to determine exact mounting, suspension points, and power feed locations.

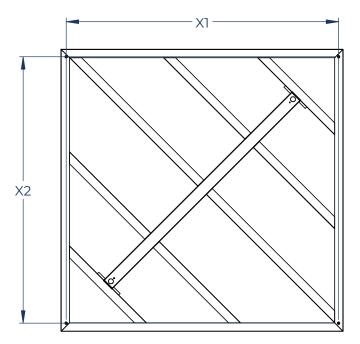

AWB Installation Instructions **Step 3 -** Prepare Fixture for Mounting


MOBERN

A. Install Hanging Kits



- Install the hanging kits to the ceiling at the desired mounting locations.
- Ensure that hanging kits are properly secured.
- · Adjust hanging cables to desired length, cables can be further adjusted after fixture is installed.
- · Refer to hanging kit installation guide for more information.

B. Lay In LED Fixture

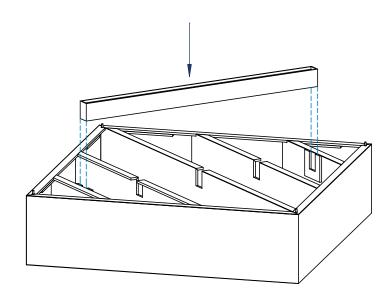


- With the acoustic material assembly on the ground, guide the LED fixture into the slots of the assembly.
- Firmly press the LED fixture into place, ensure each end is resting on the acoustic support.

AWB Installation Instructions **Step 4 -** Hang and Power the Fixture

MOBERN

A. Hang the Fixture

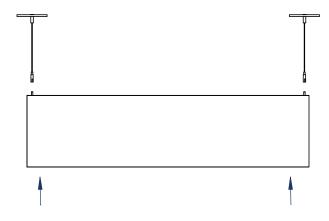

B. Power the Fixture



WIRING LEGEND		
BLACK	НОТ	Line Voltage
WHITE	NEUTRAL	Line Voltage
GREEN	GROUND	
GRAY	DIMMING	0-10V DC
VIOLET	DIMMING	0-10V DC

- Hang the fixture by screwing the installed hanging cables into the mounting points of the fixture.
- Ensure fixture is correctly oriented to the hanging dimensions from Step 2.
- · Adjust the length of the cables as needed to level the fixture once all cables have been installed.
- Wire fixtures to the incoming power supply using the provided quick disconnect clip as shown.
- · For dimming option, refer to wiring legend above.
- Use UL approved connectors only. Follow all local, state and national codes.
- · Installation is now complete.